

tempmate.[®]-M2


OPERATION INSTRUCTIONS

 Start Button


 Stop Button

 Green LED


 Red LED

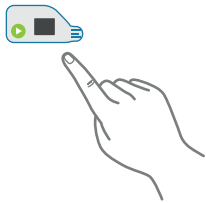

01 Keep green button pressed for minimum 5 seconds to start recording

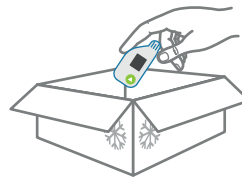

02 Add started tempmate.[®]-M2 to your shipment

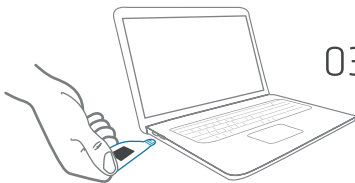

03 Connect stopped logger directly to USB port













04 The PDF report will be generated automatically

 LED Indication
 Display Indication

 Start Logger
 5 sec.  
 Stop Logger  

 Set Mark
 2 times  
 Mark limit full  

 1 time Not started 
 Low battery  3 sec. 
 Recording-OK  
 Recording-Alarm  
 Stopped-OK  
 Stopped-Alarm 